



- 1 Microphone stand
- 2 Speaker
- 3 Power indicator
- 4 Power switch
- 5 External microphone jack
- 6 Internal unit volume
- 7 External unit volume
- 8 External microphone sensitivity
- 9 Internal unit microphone sensitivity
- 10 Power adapter jack
- 11 External unit jack
- 12 Recorder jack

OPERATION

- 1) Instal internal and external units on its target place. Connect external unit to the jack (11) on the internal unit using wire from the kit;
- 2) Connect power adapter to the jack (10) on the internal unit and then plug the adapter into the socket. Move power switch (4) to «ON» position. Check that power indicator (3) lights up;
- 3) Set the volume of internal and external unit using knobs (6) and (7);
- 4) In case you need to record voice, connect recorder to the recorder jack (12) of the internal unit. Maximal amplitude of the signal is 1.2 V;
- 5) If the noise occurs on the external unit while talking then decrease internal unit volume (7) and increase external unit volume (6);
- 6) If the noise occurs on the internal unit while talking then decrease external unit volume (6) and increase internal unit volume (7);

PACKAGE

- Internal unit – 1 pc.
- External unit – 1 pc.
- Power adapter – 1pc.
- User manual – 1 pc.

SPECIFICATION

POWER
+12 V from power adapter

POWER CONSUMPTION
Peak current - 100 mA

MOUNTING TYPE
Surface mount

INTERNAL UNIT DIMENSIONS
120×84×43 mm

EXTERNAL UNIT DIMENSIONS
Ø65×18 mm

WORKING TEMPERATURE
-10 ... +60 °C

Technical support

