SK-07

Technical support







User manual







Attention!



As a result of continuous upgrades and functionality improvements, technical characteristics of the device can be changed without any preliminary declaration. This manual can contain some inaccuracy or misprint. The owner reserves the right to make corrections to the information described in the user manual and device package. The last revision of this manual is available on www.slinex.com

Safety instructions

Read and keep that manual.

The device installation process should be carried out by the qulified specialists.

Use the device from $-10\,^{\circ}\text{C}$ to $+55\,^{\circ}\text{C}$, always keep it within that temperature range.

Installation surface should be free from vibration and impact influence.

Keep this device far from open sources of heat, such as radiators, heaters, and ovens.

The device can be installed near other electronic equipment in case if the temperature of the environment does not exceed previously mentioned range.

The device should be protected from the direct influence of the natural phenomena, such as direct sunlight, rain or snow.

Don't use aggressive or abradant detergent for the device surface cleaning.

Use soft wet cloth or tissue to remove strong dirt.

Don't overpower outlets. It can cause fire or electric shock.

Nature protection



Don't throw away the device with other industrial or nutritive trash if you see that symbol. Some regions have separation and recycling systems for the electronic equipment. Connect with local authorities to receive information about recycling of electronic equipment for your region.

Rights and limitation of liability

All rights reserved. Any part of that document can not be published in any form, translated into other languages or reproduced in any way including electronic or mechanical.

Document recording and copying is strictly denied without owner permission.

Table of contents

1. Package	3
2. Specification	3
3. Description	
4. Installation	5
4.1. Cable requirements	5
4.2. Schematic diagram	
4.3. Unit mount	7
5. Operation	8
5.1. Incoming call	8
5.2. Outdoor panel monitoring	9
6. Melody, volume and image parameters settings	9
7. Limited Warranty	10

1 REV. 1.0

1. Package

SK-07 indoor monitor – 1 pc. Wall mounting bracket – 1 pc. Connection wires – 1 pkg. Mounting screws and anchors – 1 pkg. User manual – 1 pc.

2. Specification



SCREEN STANDBY MODE POWER CONSUMPTION 7", color TFT 3 W

RESOLUTION WORKING MODE POWER CONSUMPTION

1024×600 px. 5 W

VIDEO SYSTEM POWER SUPPLY

PAL / NTSC Built-in power supply, ~100–240 V

AUDIO TYPE MOUNTING TYPE Half duplex Surface mount

CALL DURATION DIMENSIONS

60 seconds 176×129×23 mm (6.93×5.08×0.91")

MEMORY WORKING TEMPERATURE No $-10 \dots +55 \,^{\circ}\text{C} \, (+14 \dots +131 \,^{\circ}\text{F})$

3. Description



- Display;
- 2 Power switch (on the side);
- 3 Microphone;
- 4 «Monitor/hang up» button outdoor panel monitoring or hang up while incoming call;
- «Answer» button incoming call answer and start conversation with the visitor;
- «Unlock» button outdoor panel unlocking on short press or monitor relay unlocking on long press (more than 2 seconds);
- 7 «Up/Down» button change current parameter value;
- 8 «Settings» button choose the melody, volume and image parameters;
- 9 Speaker.

3




4. Installation

4.1. Cable requirements

Disconnect all power cables before device installation.

Cable type that is used for device connection depends on the distance between the last indoor monitor in the system and outdoor panel:


- a) Use 4-wire cable with such parameters:
 - distance up to 25 meters (82 ft.) use a cable with 0,22 mm² square of one wire (AWG 24);
 - distance 25 to 50 (82-164 ft.) meters use a cable with 0,41 mm² square of one wire (AWG 21);
 - distance 50 to 100 meters (164-328 ft.) use a cable with 0,75 mm² square of one wire (AWG 18).

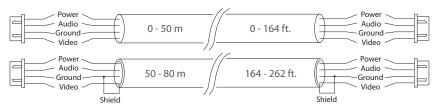


b) If the distance between door monitor and door panel is between 80 and 100 meters (262-328 ft.) then use a 3-wire cable with 0,75 mm² (AWG 18) square of one wire and RG-59 or RG-6 coaxial cable for the video signal.



- c) Shielded or non-shielded twisted pair (not recommended):
 - distance up to 25 meters (82 ft.) non-shielded twisted pair can be used;

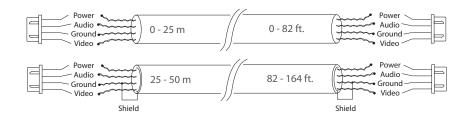

4.2. Schematic diagram

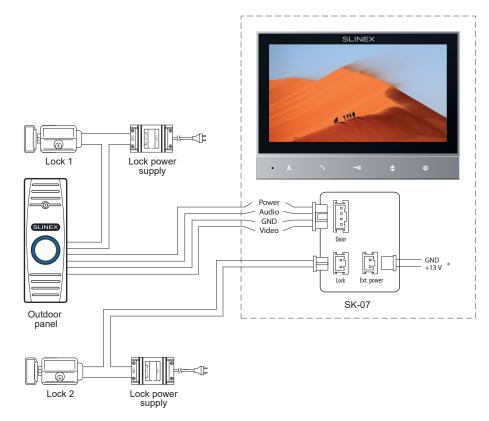

Notes:


- * Use «Ext. power» plug to connect external power supply +12-14 V. While using external power supply please keep main power cord ~100-240 V disconnected from the outlet. Otherwise it can damage monitor circuits.
- ** Outdoor panel, locks and power supplys on the diagram are optional devices and are not included into monitor's kit.

5

4.3. Unit mount


7

- 1) Take the surface mount bracket from the kit and place it on 150-160 cm height.
- 2) Mark and drill four halls in the wall.
- 3) Take four anchors from the kit and hammer them into the drilled halls.
- 4) Fix surface mount bracket on the wall with four screws from the kit.
- 5) Connect all communication wires and fix the monitor on the surface mount bracket.

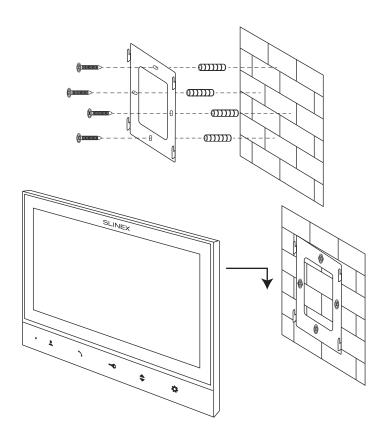


5. Operation

5.1. Incoming call

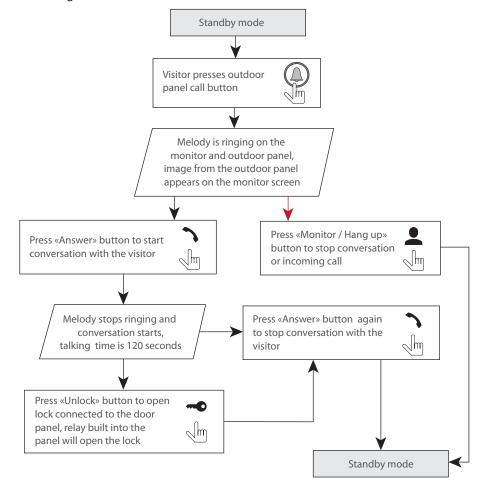

ş

5.2. Outdoor panel monitoring

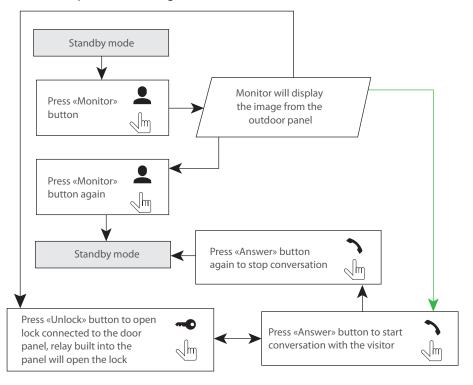

6. Melody, volume and image parameters settings

During outdoor panel monitoring or conversation press button on the keyboard to enable settings menu on the top of the screen. Press button to change current parameter value or press button again to go to the next parameter in the following sequence:

- incoming call melody select;

்ற - incoming call melody volume setting;

- talking volume setting;

- brightness setting;

contrast settting.

7. Limited warranty

Manufacturer guarantees product normal functioning during the warranty period if the user keeps all safety instructions described in that manual.

Warranty period is 12 months from the moment of the product purchasing (warranty period could be extended up to 24 months or more, depending on the local regulations).

Warranty period allows user to make guarantee repair in cases when normal functioning of the product was violated by the fault of manufacturer and the user has not offend transporting, installation and working conditions.

This limited warranty does not cover any damage to the product that results from improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive electrical supply, abnormal mechanical or environmental conditions, or any unauthorized disassembly, repair or modification.

Warranty void in such cases:

- · the product was damaged by the fault of the customer;
- the product wasn't properly installed according reccomendations from the manual;
- the sticker on the backside of the product was broken;
- the product was not used for its intended function.

This limited warranty covers only repair, replacement, refund or credit for defective products, as provided above. Manufacturer is not liable for, and does not cover under warranty, any damages or losses of any kind whatsoever resulting from loss of, damage to, or corruption of, content or data or any costs associated with determining the source of system problems or removing, servicing or installing products. This warranty excludes third party software, connected equipment or stored data. Manufacturer is therefore not liable for any losses or damage attributable to third party software, connected equipment or stored data.

In the event a product has been discontinued, manufacturer shall either repair the product, offer to replace it with a comparable product or provide a refund at the lesser of the purchase price or the product's current value.

Repaired or replacement products will continue to be covered by this limited warranty for the remainder of the original warranty term.

9